

Written By: Susan Marano



INTRODUCTION

This guide demonstrates how to remove the front and back cover from the camera



TOOLS:

- [Anti-Static Wrist Strap](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera near the selector dial.

Step 2



- Press thumb firmly on battery door and slide it in the direction of the arrow.
- Lift thumb allowing the door to swing open.

Step 3 — Back Cover



- Before removing back cover, it is advisable to use an [anti-static wrist strap](#) to prevent damage to electronics.

Step 4



- Turn the camera off by firmly pressing the power button located on top of the camera.

Step 5



- Locate the 7 screws holding the back cover on.
- Three screws are located on the bottom of the camera.
- Two screws are located on the side shown in the photograph.
- Two final screws are located on the opposite side shown in the photograph.

Step 6



- Remove all 7 screws:
 - Hold the camera firmly with one hand so that you can still see a screw.
 - Place the Philips 00([Found here](#))screwdriver into the screw.
 - Turn the screwdriver to the left until it is free.
 - Repeat for the remaining screws.

Step 7




- Use [plastic opening tools](#) to slightly open the side of the case.
- Insert a plastic opening tool and apply pressure to the internal three tabs at the top.
 - The first two are near the words "3X Optical Zoom".
 - The third is near the shutter button.

Step 8





- Gently pull apart the back cover from the rest of the camera.
 - Make sure there are no more screws or tabs keeping the cover on.
 - Use the plastic opening tool to separate any sides still closely connected.

Step 9 — Front Cover

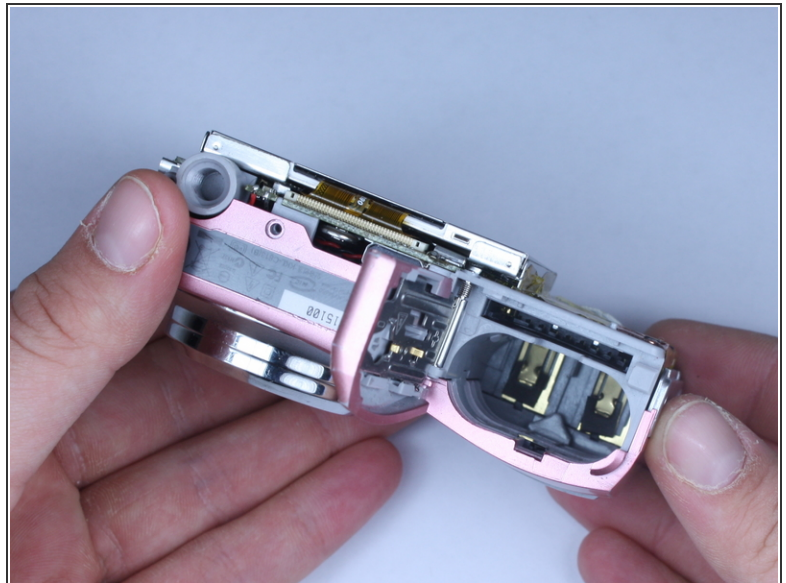

- Open the battery door.
 - Press thumb firmly on battery door and slide it in the direction of the arrow.
 - Lift thumb allowing the door to swing open.


Step 10

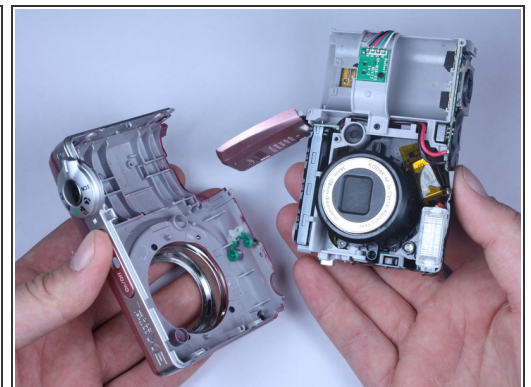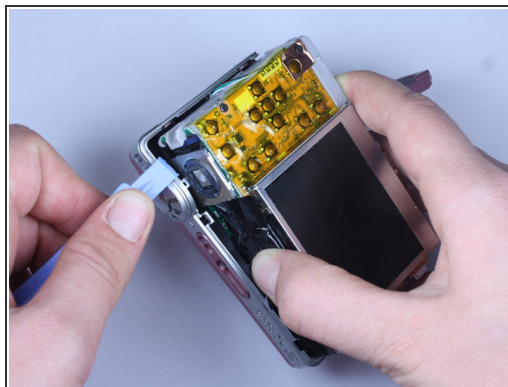

- Use the plastic opening tool to lift the casing around the shutter button.
- Gently remove the front cover from the device.

Step 11



 Do not touch the terminals shown in the photo. These link to the capacitor which could shock you if not discharged.

- To discharge the capacitor follow this [guide](#).

This document was last generated on 2017-07-24 09:19:10 AM.